

RETRACTABLE SCREEN SERVICE GUIDE

FOLLOWING THE PROPER HANDLING GUIDELINES AND SIMPLE MAINTENANCE TIPS LISTED BELOW WILL ENSURE YEARS OF WORRY FREE SERVICE FROM YOUR NEW PURCHASE.

- WHEN NOT IN USE, THE SCREEN SHOULD BE RETRACTED INTO THE PROTECTIVE HOUSING.
- WHEN ROLLING THE SCREEN INTO THE HOUSING, ENSURE THAT THE MESH ROLLS UP EVENLY. RETRACTING THE DOOR WITH CREASES IN THE SCREEN CAN CAUSE PERMANENT WRINKLES.
- ENSURE THAT THE TRACKS ARE KEPT FREE OF DIRT AND DEBRIS, WHICH MAY CAUSE THE DOOR TO PERFORM POORLY. CLEANING THE TRACKS AND LUBRICATING THEM WITH A GREASELESS SILICONE SPRAY CAN RESTORE SMOOTH OPERATION. (USE ONLY A GREASELESS SILICONE SPRAY AS OTHER SPRAYS CAN REDUCE THE EFFECTIVENESS OF THE UNIT'S OPERATION).
- DO NOT PUSH ON THE MESH TO RELEASE THE MAGNET. THIS SAFETY FEATURE RELEASES THE SLIDE BAR FROM THE MAGNET IF THE MESH IS LIGHTLY BUMPED INTO, HOWEVER, CONTINUAL ABUSE WILL AFFECT HOW THE DOOR OPERATES.
- IT IS NORMAL FOR THE MESH TO "SAIL" IN CERTAIN WINDY CONDITIONS. THIS MAY CAUSE THE MESH TO PULL OUT OF THE TRACK, HOWEVER, WHEN THE WIND SUBSIDES THE MESH WILL RETURN AGAINST THE TRACK.
- THE UNIT IS SPRING LOADED AND MAY RETRACT SUDDENLY. EDUCATE THOSE USING THE DOOR AS TO HOW THE PRODUCT FUNCTIONS IN ORDER TO ENSURE TROUBLE FREE OPERATION.
- INSECT SCREENS ARE INTENDED TO PROVIDE REASONABLE INSECT CONTROL AND ARE NOT INTENDED TO PROVIDE THE RETENTION AND/OR SECURITY OF OBJECTS, ANIMALS OR PERSONS INSIDE OR OUTSIDE YOUR DWELLING.